Pure Fogger Industrial Humidifier



User manual

This humidifier shows many features such as a very good misting-performance and rapid humidifying. It comes in a compact design, with low-noise emission and an easy assembly.


- -Superior steam production
- -Silent operation
- -Continuous operation

- -Water-supply cut-off by valve
- -Coverage: up to 150m2
- -2 alternative outlets included

Features

- 1. Practical, compact design and easy operation.
- 2. Equipped with handle for easy and quick moving.
- 3. For optimum results use the humidifier with a controller.
- 4. Humidity and temperature range: 0 95% RH, 2 40°C.
- 5. Water used got to be clean, soft or de-ionized water only.
- 6. Steam particle size, 5-10 microns.
- 7. Lowers environment temperature between 6 8°C.
- 8. Coverage: up to 150 m2

35 cm 7,6 KG
2.0
32 cm.
4,5 L
3,5-4,0 L/1 hr
220V, 50Hz
100W

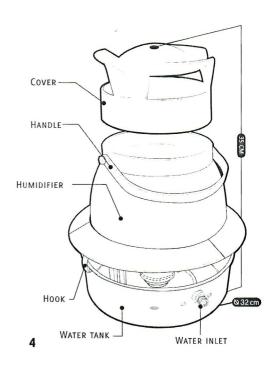



How to assemble

- 1. Put main body of humidifier into water reservoir.
- 2. Use cover as needed.
- 3. Connect the humidifier body to the water reservoir with two hooks.
- 4. Connect humidifier to water source and check if the floating valve is work correctly.
- 5. Connect the humidifier to controller or directly to power supply.

Attention

- 1. For optimate performance use the humidifier together with a controller.
- 2. Never add any highly acid or strong alkaline chemicals to the supplied water.
- 3. Never use water with mass sediment or other impurities.
- 4. Clean the water outlet frequently to avoid obstruction of water outlet.
- 5. Please operate at least 2 times per day with a duration of 3-5 minutes each time.
- 6. If the humidifier is not used during longer periods, dry the unit, wipe off the surface and run the humidifier machine without water for about 10-15 minutes, to eliminate all water inside the unit and by this avoid all oxidation.
- 7. If wide diffused fog spraying is required, please pull the fan down. Lift the fan to decrease the fog-diffusion.









